

Turn Your Phone On & Off

1. Press Left Soft Key (MENU), Phone Info (6), My Number (1)
2. You will see your phone number
3. To return to the previous page, press OK Key
4. Press the END Key until your Power On logo appears on you internal display and the tone sounds

Make a Call

1. Enter a phone number

NOTE: To modify the phone number you have entered: Erase one digit at a time by pressing the Back Key or Erase the entire number by pressing and holding the Back Key

2. Press the Talk Key

NOTE: If "Call Failed" appears on the display or the line is busy, press the End Key, when you place or receive a call from a phone number stored in your contact list with a contact name, the name and number will be displayed

3. To end a call, press the End Key

Answer an Incoming Call

1. When your phone rings or vibrates, press the Talk Key to answer the incoming call. (Depending on your phone's settings, you may also answer incoming calls by opening the phone or by pressing any key.)
2. To end the call, press the End Key

NOTE: To ignore incoming calls, press the Right Soft Key (IGNORE)

View a Phone Book Entry

1. Press the Left Soft Key (MENU), Contacts (2), Contact List (1)
2. The list of names in your phone book is displayed alphabetically
3. Enter a name or part of a name or scroll through the list by pressing the Navigation Key up or down
4. To show entry details, press Left Soft Key (VIEW)

Add a New Phone Book Entry

1. Enter the phone number then press the Left Soft Key (SAVE). Choose "New Contact" then press the OK Key to select
2. Press the Navigation Key up or down to choose the type of number you're adding, as indicated by the Number Type. Press the OK Key to select
3. Enter a name. To change the input mode, press the Right Soft Key (Key (Abc))
4. Press the Navigation Key down to select other options (Mobile 1, Mobile 2, Home...)
5. If you entered a phone number, press the Right Soft Key (OPTIONS) to select one of the following options: Add 2-Sec Pause, Add Wait
6. To store the entry, press the Left Soft Key (SAVE). "Contact Saved" will be displayed



1. Ear Piece
2. Volume Button
3. Left Soft Button
4. Right Soft Button
5. OK Button
6. Speaker Button
7. AVR Button
8. Send Button
9. Clear Button
10. End/Power Button
11. Lock Button
12. Vibrate Button

UTStarcom CDM8630

Set Ring Style & Volume

1. When your phone is not in any menu or performing any functions, press the Side Volume Key up or down. Or, press the Left Soft Key (MENU), Settings (5), Sound Settings (1), Volume (2)
2. Select one of the following options, then press the OK Key to save it:
Silence All, Vibrate Mode, 1 Beep/Low/Medium/Med-High/High

NOTE: Press the Side Volume Key up or down to adjust Earpiece volume during a call

View a Text Message

1. Press the Left Soft Key (MENU), Messaging (1), Inbox (3). Or the Right Soft Key (MESSAGE), Inbox (3)
2. The received messages list will be displayed
3. By pressing the Right Soft Key (OPTIONS), the user can choose from the following: ERASE, ERASE INBOX, LOCK & UNLOCK, FORWARD, ADD TO CONTACTS
4. Select a message and press the Left Soft Key (View). The message is displayed
5. If you receive an EMS message, press the Left Soft Key (MUTE/UNMUTE) to turn On/Off EMS sound